

Table of programmes

PROGRAMME		kg (MAX.) * (see control panel)											1) °C (MAX.)			
		6+4kg	7+4kg	8+5kg	9+5kg	9+6kg	10+6kg	10+7kg	12+9kg	13+8kg	14+9kg	(MAX.)	2		1	
	COTTONS 2)	6	7	8	9	9	10	10	12	13	14	90°	●	●		
ECO 40-60	ECO 40-60	6	7	8	9	9	10	10	12	13	14	60°	●	●		
ECO 40-60 	WASH AND DRY	4	4	5	5	6	6	7	9	8	9	-	●	●		
 + Pre	COTTON + PREWASH 2)	6	7	8	9	9	10	10	12	13	14	60°	●	●	●	
	SYNTHETIC AND COLOURED 2)	3	3,5	4	4,5	4,5	5	5	6	6,5	7	60°	●	●		
	RINSE	-	-	-	-	-	-	-	-	-	-	-	△	●		
	DRAIN & SPIN	-	-	-	-	-	-	-	-	-	-	-				
	DRYING	DRY WOOL											-			
		LOW HEAT											-			
		HIGH HEAT											-			
	WOOL/ DELICATES 49'	1	1	2	2	2	2	2	2,5	2,5	2,5	30°	●	●		
3)	14'	1	1	1,5	1,5	1,5	1,5	1,5	2	2	2	40°	●	●		
14' 30' 44'	RAPID 30'	2	2,5	2,5	2,5	2,5	2,5	2,5	3	3	3	40°	●	●		
	44'	3	3,5	3,5	3,5	3,5	3,5	3,5	4	4	4	40°	●	●		
59° 20°C	MIXED & COLOURED 59'	6	7	8	9	9	10	10	12	13	14	40°	●	●		
39° 	EASY IRON	1,5	1,5	1,5	1,5	1,5	1,5	1,5	1,5	1,5	1,5	-				
49° 	SPECIAL 49'	6	7	8	9	9	10	10	12	13	14	40°	●	●		
REMOTE CONTROL (Wi-Fi) Position that you have to select when you want to enable remote control through the App (via Wi-Fi).																